American DJ®

User Instructions

MINI GRESSOR II



SPECIFICATIONS: MODEL - MINI-Gressor II™

Weight: 8 Lbs.

Dimensions: 12"H x 12"W x 5.5"L

Lamp: 2 x ZB-LL200 120v/200w

Fuse: 10A Supply Voltage: 120V

Working Position: Any Safe position

Duty Cycle:NONEColors:MultipleLenses:14 Colored

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Thank you for purchasing the MINI-Gressor IITM by American DJ_®. For your convenience the MINI-Gressor IITM has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or operating your new MINI-Gressor IITM.

Operating Instructions:

This unit is ready to be hung or set on a flat surface. This unit requires a sound source to operate. The unit will react to the beat of music via its internal microphone. Be sure not to obstruct the cooling vents. Keep in a well ventilated area. For best results, fog or special effects smoke must be used in order to see the beams of light.

Caution! Never open this unit when in use. Always disconnect main power before replacing the lamps and fuse. Remember to always replace with the exact same type lamp and fuse, unless otherwise specified by an authorized American DJ® service technician.

Lamp replacement: Disconnect the units main power. Remove the thumb screws on trap door located on the top of the unit. Carefully remove and replace lamps. Be sure to follow the handling instructions that are included with your new lamps. Replace the cover and reconnect the main power.